

exam august 2005

2 e)


S  
vertical takeoff  
turboprop speed.

W  
consumption  
slow wt ac.  
failure sensitive.

O  
new market  
spin-off to military use.

T  
new market  
spilling from helicopter sector

3 a)

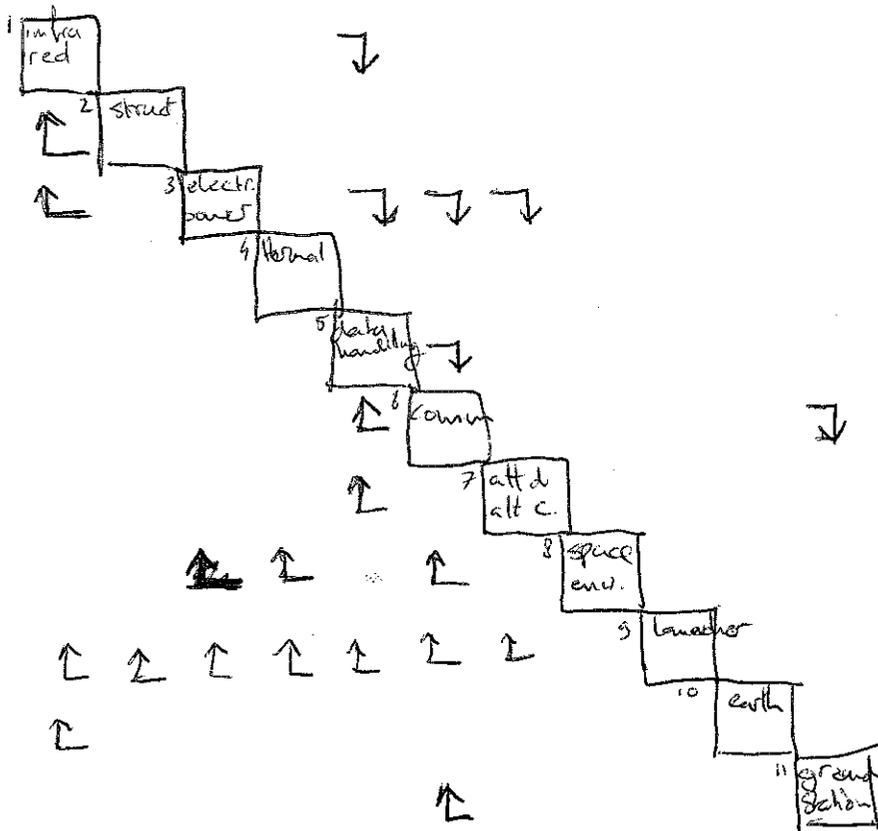


3b) 3e) how to increase overview.

combine: 1) launcher + space env = ext. env.

2) comm + ground stat = ground stat interaction

3) ~~flight~~ IR cam + earth = subject data

4a)

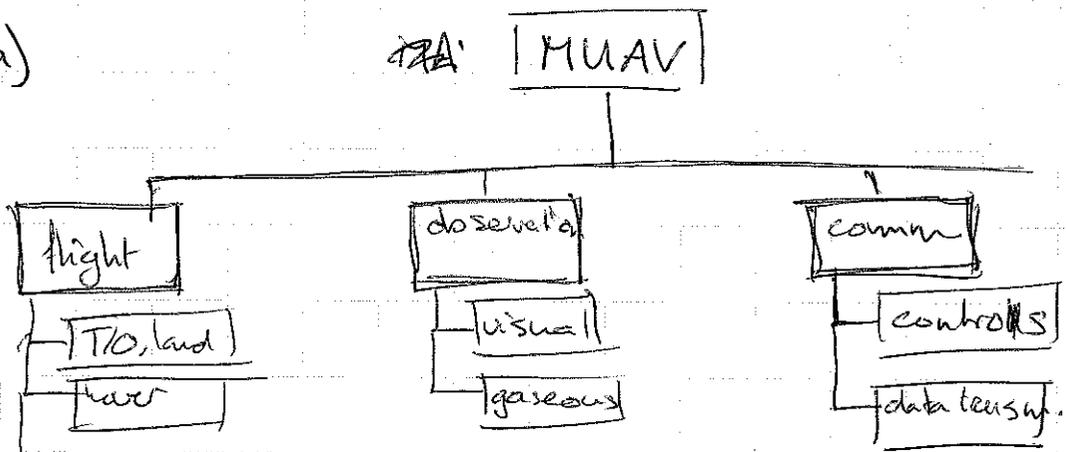

b)

